COOKTOP PARTS

For Model: RF362BBDW0, RF362BBDN0
(White) (Almond)

30" ELECTRIC
FREESTANDING
SELF CLEAN RANGE

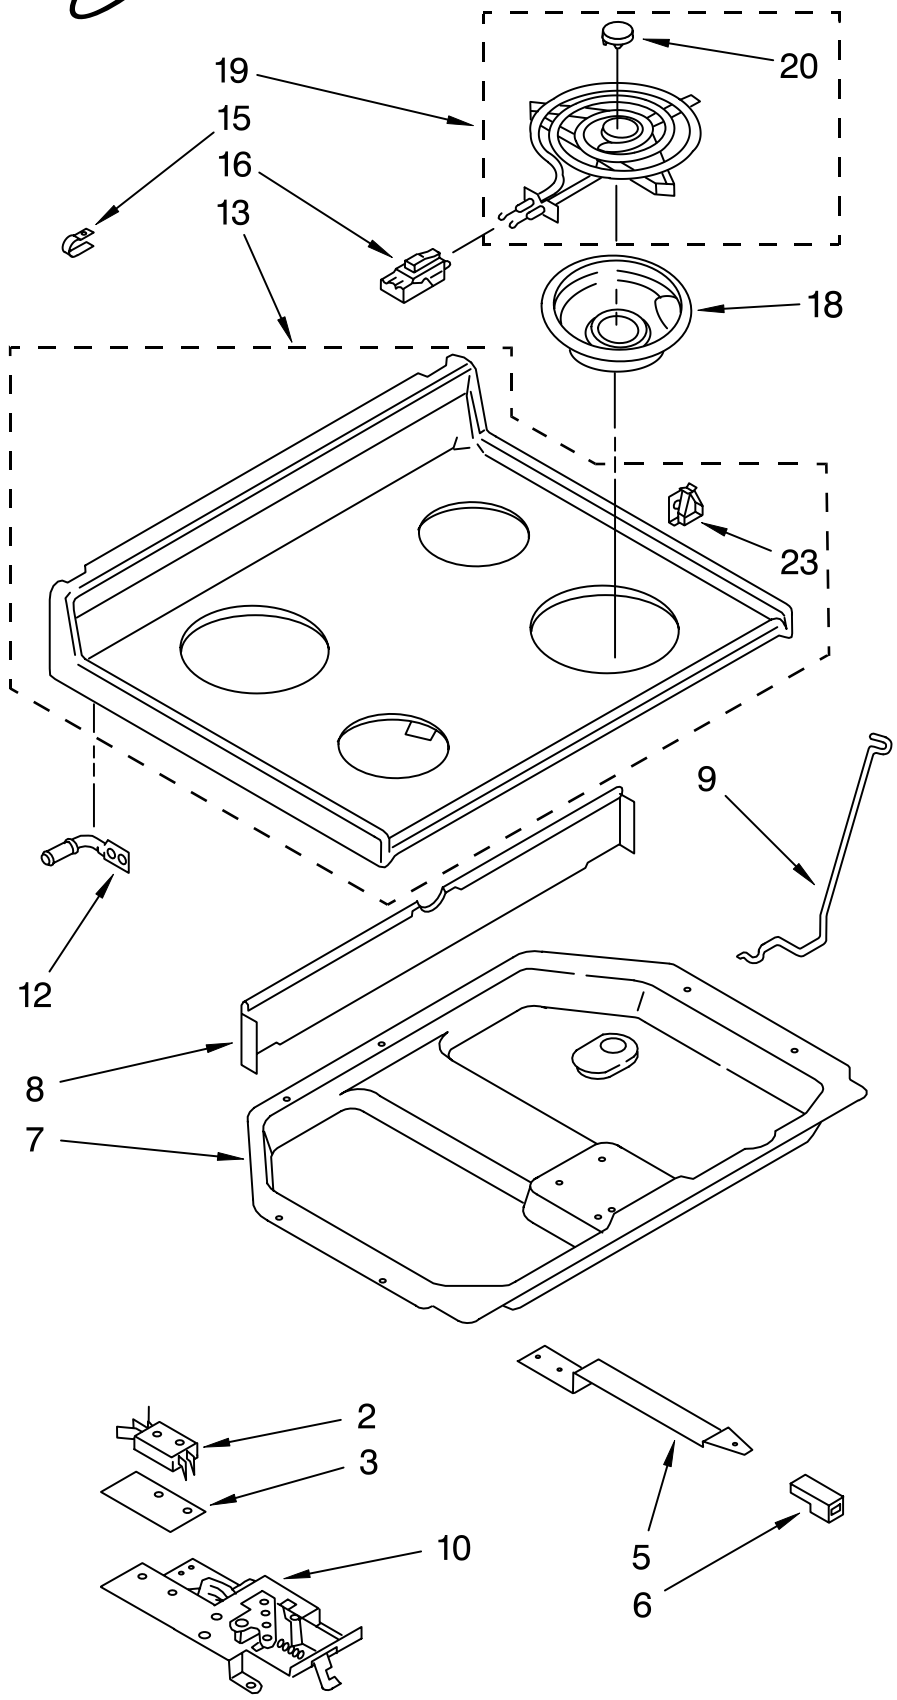

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
2	3169497	Safety Switch
	312717	Screw (2)
3	3169498	Insulator, Switch
5	3169081	Handle, Latch
	308422	Screw,
6	3148684	Knob, Latch
7	3169186	Box, Burner
	309112	Screw, 10A x 3/8 (4)
8	307973	Shield, Wiring
	343641	Screw, 10−16 x 1/2 (4)
9	3148659	Rod, Cooktop
10	3148668	Latch, Lock
12	3169384	Pin, Cooktop (2)
	343641	Screw, 10−16 x 1/2 (4)
13		Cooktop
	3170981	White
	3170982	Almond
	690989	Screw, 10−32 x 1/2
15	308605	Strain Relief
	343641	Screw, 10−16 x 1/2
16	312606	Receptacle Clip (4)
	313808	Screw (4)
18		Pan−Combination
	3169204	6" (2)
	3169205	8" (2)
19	660532	Unit, Surface 6" L.F. & R.R.
	660533	Unit, Surface 8" R.F. & L.R (Includes Illus. 20)
20	309195	Medallion (4)
23	3148790	Hold Down Clip (4)
	814102	Nut (4)
	487887	Screw (4)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Model: RF362BBDW0, RF362BBDN0
(White) (Almond)

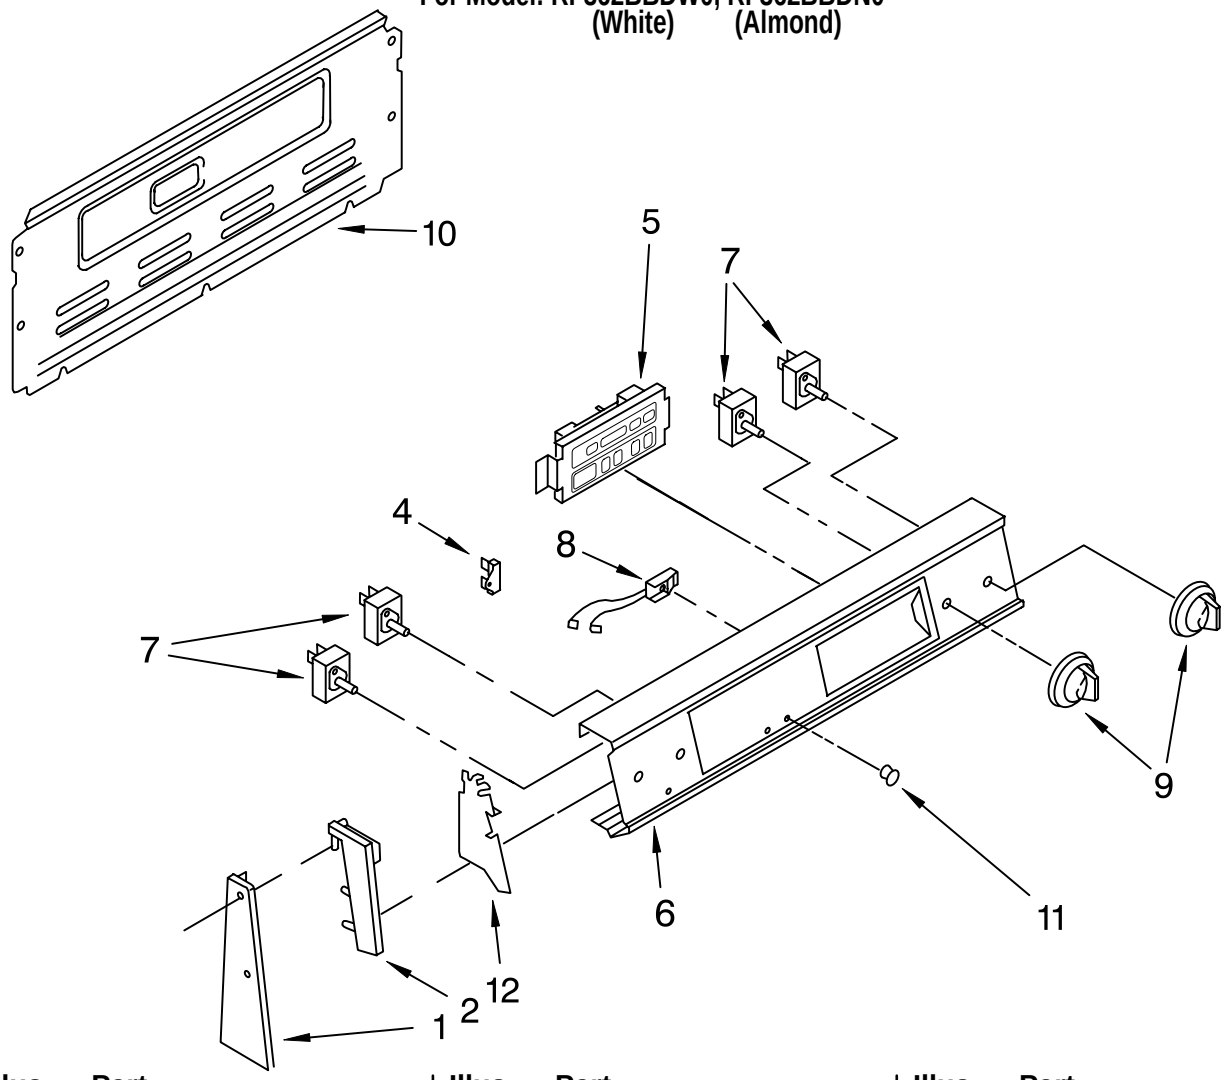

Illus. No.	Part No.	DESCRIPTION
		required to attach a part are listed immediately following that part.
1	3187671	End Trim R.H.
	3187672	End Trim L.H.
	309112	Screw, 10A x 3/8 (2)
	343641	Screw, 10−16 x 1/2 (4)
2	3187791	End Cap R.H.
	3187792	End Cap L.H.
	254225	Screw, 8BT x 1/4 (4)
4	3187848	Fuse
5	3195182	Timer, Electronic
	246132	Screw, 8A x 3/8 (2)
6	3188687	Panel, Control
	690989	Screw, 10−32 x 1/2
7		Switch, Infinite
	3148952	6" (2)
	3148954	8" (2)
	308119	Screw, 8−32 x 1/4 (8)
8	3169457	Indicator Light (2)
9	3188721	Knob (4)
10	3187332	Rear Cover
	343641	Screw, 10−16 x 1/2 (8)
11	313101	Lens, Amber (2)
12	313608	Shield, Glass (2)
	246132	Screw, 8A x 3/8 (2)

OVEN PARTS

For Model: RF362BBDW0, RF362BBDN0
(White) (Almond)

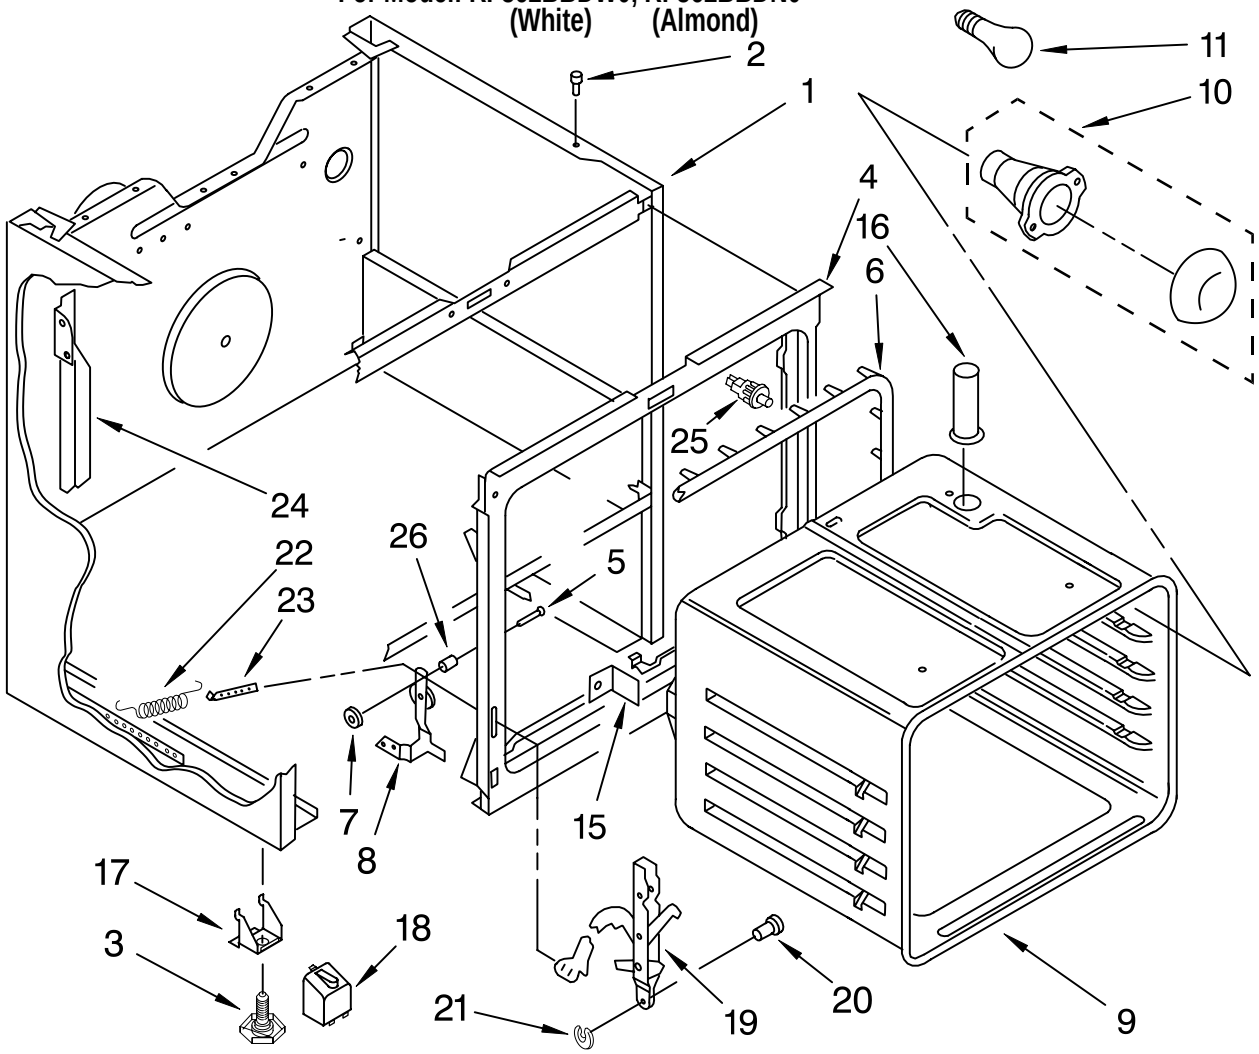

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1		Main Chassis
	330086	White
	330090	Almond
	690989	Screw, 10−32 x 1/2
	343641	Screw, 10−16 x 1/2 (2)
2	238614	Bumper, Cooktop (2)
3	3169499	Leg Leveling (4)
4	3176718	Frame, Front
	343641	Screw (Sides)
	3150537	Screw (Top)
5	307985	Pin, Hinge
6	3169251	Seal, Door
7	308306	Pushnut
8	3176710	Hinge, R.H.
	3176711	Hinge, L.H.
	343641	Screw, 10−16 x 1/2 (4)
9	3176611	Oven (30" Pyro)
	311056	Screw (2)
	3150537	Screw
10	3150505	Socket, Lamp
11	311255	Bulb, Oven Light
15	311220	Bracket, Oven Mounting
	343641	Screw, 10−16 x 1/2 (4)
16	3169108	Vent, Oven
	307748	Screw, 10A x 1/2 (2)
17	3169418	Support, Foot (2)
	343641	Screw (2)
18	3169448	Cover, Foot (2)
19	3176709	Channel, Arm (2)
20	307986	Hinge Pin (2)
21	307594	Ring, Retainer (2)
22	308127	Spring, Oven Door (2)
23	308125	Anchor, Spring (2)
24	313196	Support, L.H. Channel
	313197	Support, R.H. Channel
	343641	Screw, 10−16 x 1/2 (4)
25	310345	Switch, (Oven light)
26	309111	Snubber, Door (2)

Following Parts Not Illustrated

Part No.	DESCRIPTION
3169093	Insulation, Wrap
3169094	Insulation, Oven Back
814091	Anti−Tip Kit (floor Mount)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Model: RF362BBDW0, RF362BBDN0
(White) (Almond)

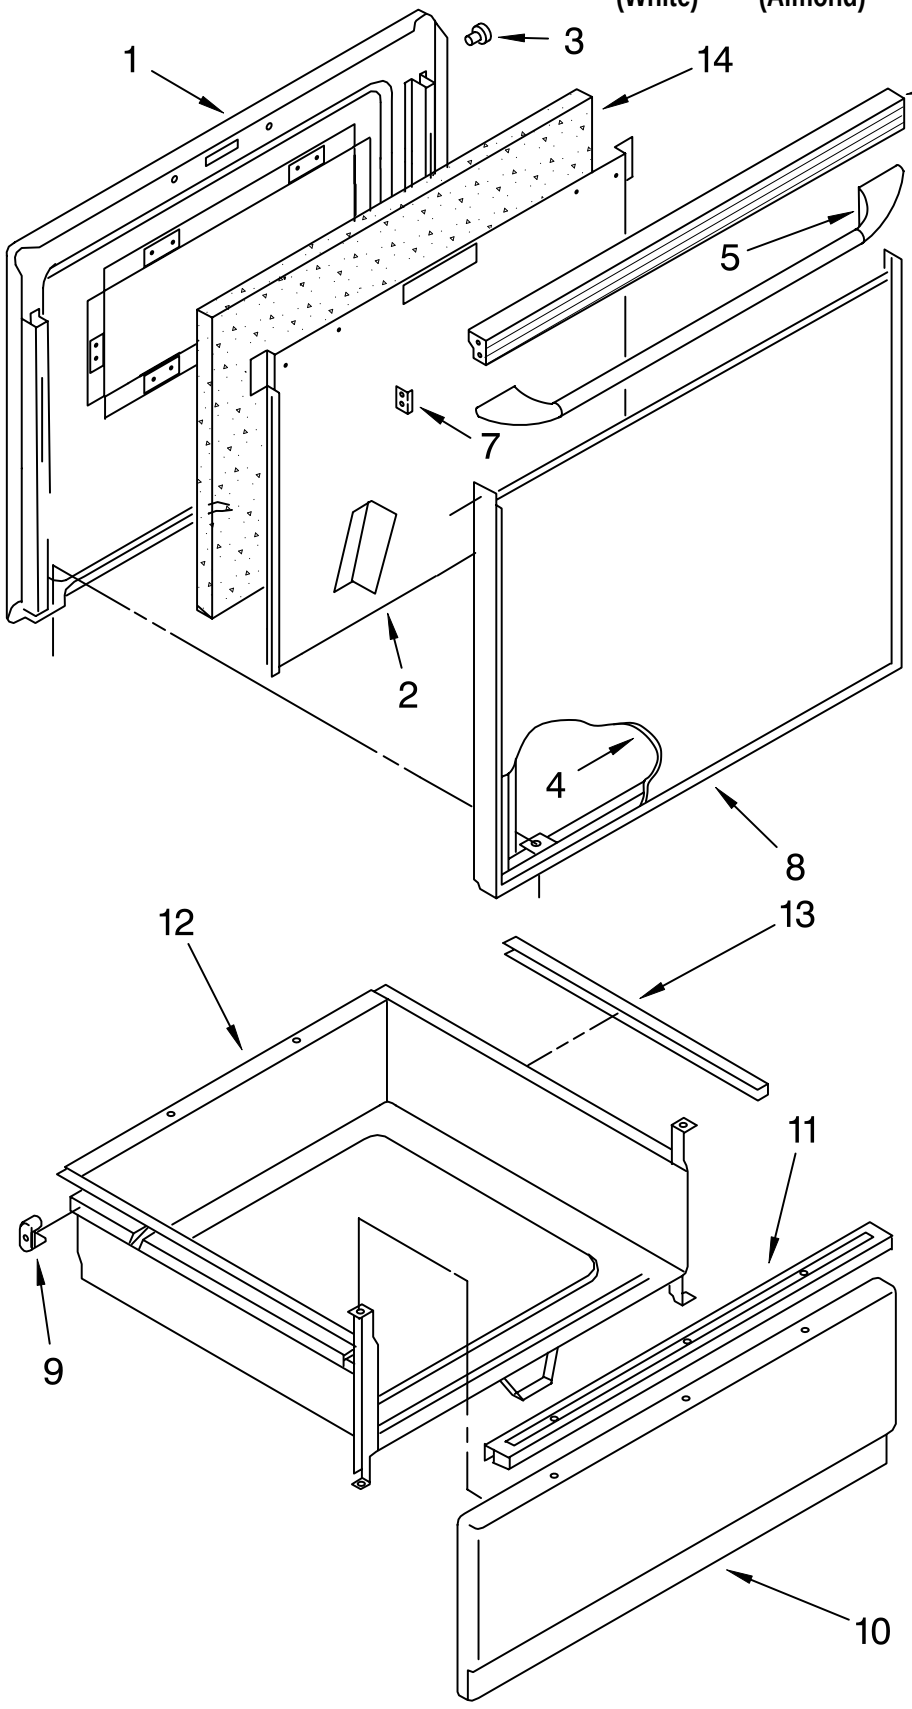

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	3172219	Liner, Oven Door
	307748	Screw (2)
2	3148160	Retainer, Insulation
	3185647	Screw (4)
3	3148182	Bumper, Door (4)
4	3148186	Panel, Glass
5	3188695	Handle, Door
	3169474	Screw (2)
6	3188692	Door Top, Vent
	307748	Screw (2)
7	3148282	Clip, Handle (2)
	3149333	Screw (4)
8	3188997	Frame, Door
	3149333	Screw (3)
	3149253	Screw (4)
9	307980	Glide, Rear (2)
	3393008	Screw,10−16x1/2(2)
10		Panel, Drawer
	3169422	White
	3169423	Almond
	313349	Screw, 8−18 x 1/2
11		Handle, Drawer
	3169473	White
	3169472	Almond
12	327887	Drawer, Utility
13	309329	Protector (2)
14	3147951	Insulation

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UNIT PARTS

For Model: RF362BBDW0, RF362BBDN0
(White) (Almond)

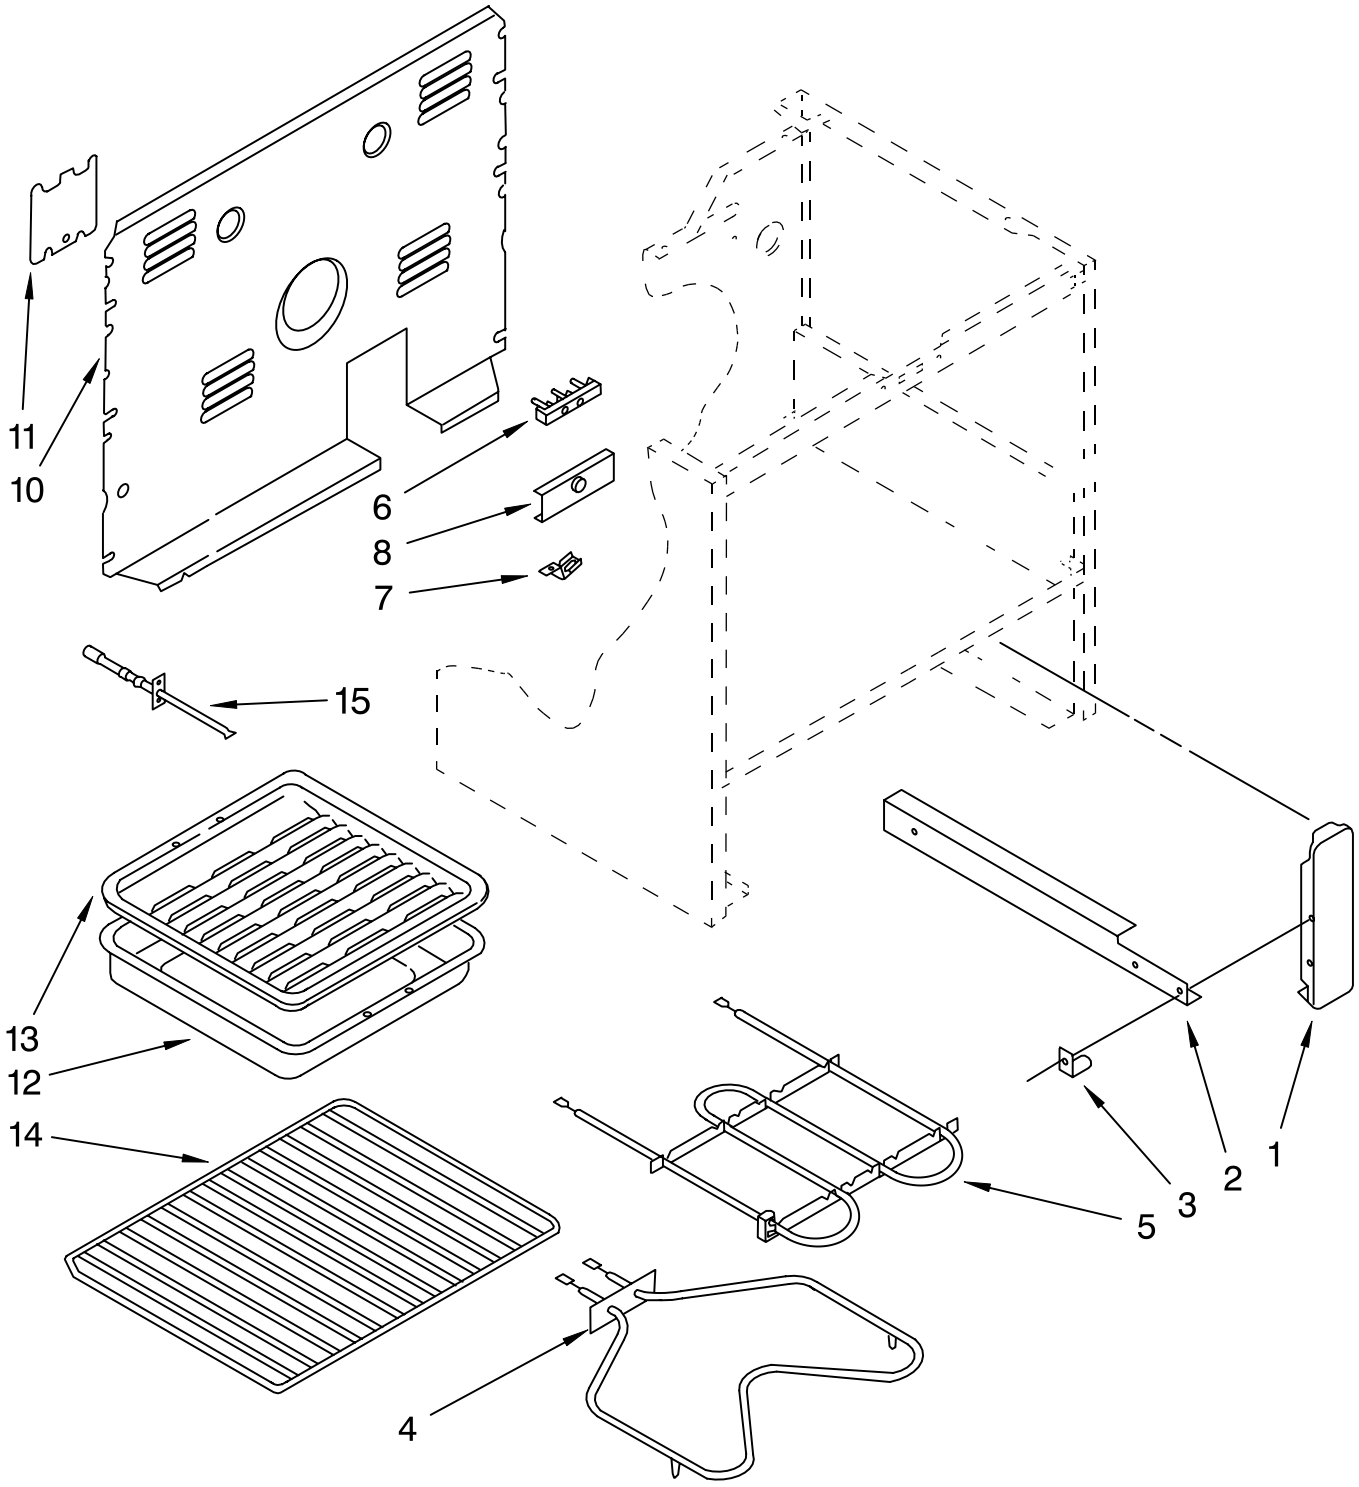

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UNIT PARTS

For Model: RF362BBDW0, RF362BBDN0
(White) (Almond)

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	3169420	Bracket, Mounting (2)
2	3149255	Rail R.H. (Includes Illus. 3)
	3149256	Rail L.H. (Includes Illus. 3)
	343641	Screw, 10−16 x 1/2
3	3149257	Glide, Front (2)
	307748	Screw (2)
4	661170	Unit, Bake (240V)
		308180 (Alt.)
		313827 (Alt.)
	312309	Unit, Bake (208V)
	3150532	Screw (2)
5	660579	Unit, Broil
		311714 (Alt.)
		311713 (Alt.)
	312308	Unit, Broil (208V)
	3150532	Screw (2)
6	258076	Terminal Block
	98884	Screw, 10−16 x 1 (2)
	112432	Nut (6)
7	308498	Ground Strap
	313660	Clip
	690989	Screw, 10−32 x 1/2
8	3150190	Bracket, Service
	343641	Screw, 10−16 x 1/2 (2)
10	3148975	Cover, Rear
	343641	Screw, 10−16 x 1/2 (7)
11	307972	Cover, Service
	343641	Screw, 10−16 x 1/2 (2)
12	3169076	Pan, Broiler
13	3147563	Rack, Broiler
14	308173	Rack, Oven
	308172	Rack, Offset
15	3148440	Sensor, Temp.
	98520	Screw (2)

OPTIONAL PARTS NOT INCLUDED

Illus. No.	Part No.	DESCRIPTION
		SPLICING WIRES−−25FT. LENGTH
	242828	Wire, Black 12 Ga. 150 °c
	242820	Wire, Black 14 Ga. 150 °c
	242821	Wire, Blue 14 Ga. 150 °c
	242822	Wire, Brown 14 Ga. 150 °c
	242830	Wire, Brown 14 Ga. 200 °c
	242823	Wire, Green 14 Ga. 150 °c
	242824	Wire, Orange 14 Ga. 150 °c
	242829	Wire, Red 12 Ga. 150 °c
	242825	Wire, Red 14 Ga. 150 °c
	242831	Wire, Red 14 Ga. 200 °c
	242826	Wire, White 14 Ga. 150 °c
	242827	Wire, Yellow 14 Ga. 150 °c
	242832	Wire, Yellow 14 Ga. 200 °c
		PAINT, TOUCH−UP (1/2oz.)
	72017	White
	72107	Almond
	72109	New Avocado
	72108	Coffee
	72110	Harvest Gold
	72112	Toast
	72113	Platinum
	**511873	White Porcelain (2 Oz.)
		PAINT, PRESSURIZED SPRAY (13 oz.)
	350930	White
	350956	Almond
	261888	New Avocado
	261886	Coffee
	261890	Harvest Gold
	285365	Toast
	285366	Platinum
	285006	Superior Black
	206922	Primer (White)
	206925	Leveler (Thinner) (2 oz.)
		**Note: Cooktop Surface is Porcelain; All Other Panels are Painted Surfaces.
		PAINT, BULK (1 qt.)
	799344	White (Uncut)
	978883	Almond (Uncut)
	261891	Harvest Gold (Uncut)
	285367	Toast (Uncut)
	285368	Platinum (Uncut)
		REFINISHING MATERIAL
	799832	Kit, Porcelain Repair (White)
	242756	Touch−Up Self−Clean (1/2 Pt.)
	261582	Grease
		ACCESSORY PARTS
	241430	Foil, Aluminum Oven (18" x 25')
	LIT677973	Manual, Range (Do−It−Yourself)
		ANTI−TIP KIT
	814234	Wall Mount

WIRING HARNESS PARTS

For Model: RF362BBDW0, RF362BBDN0
(White) (Almond)

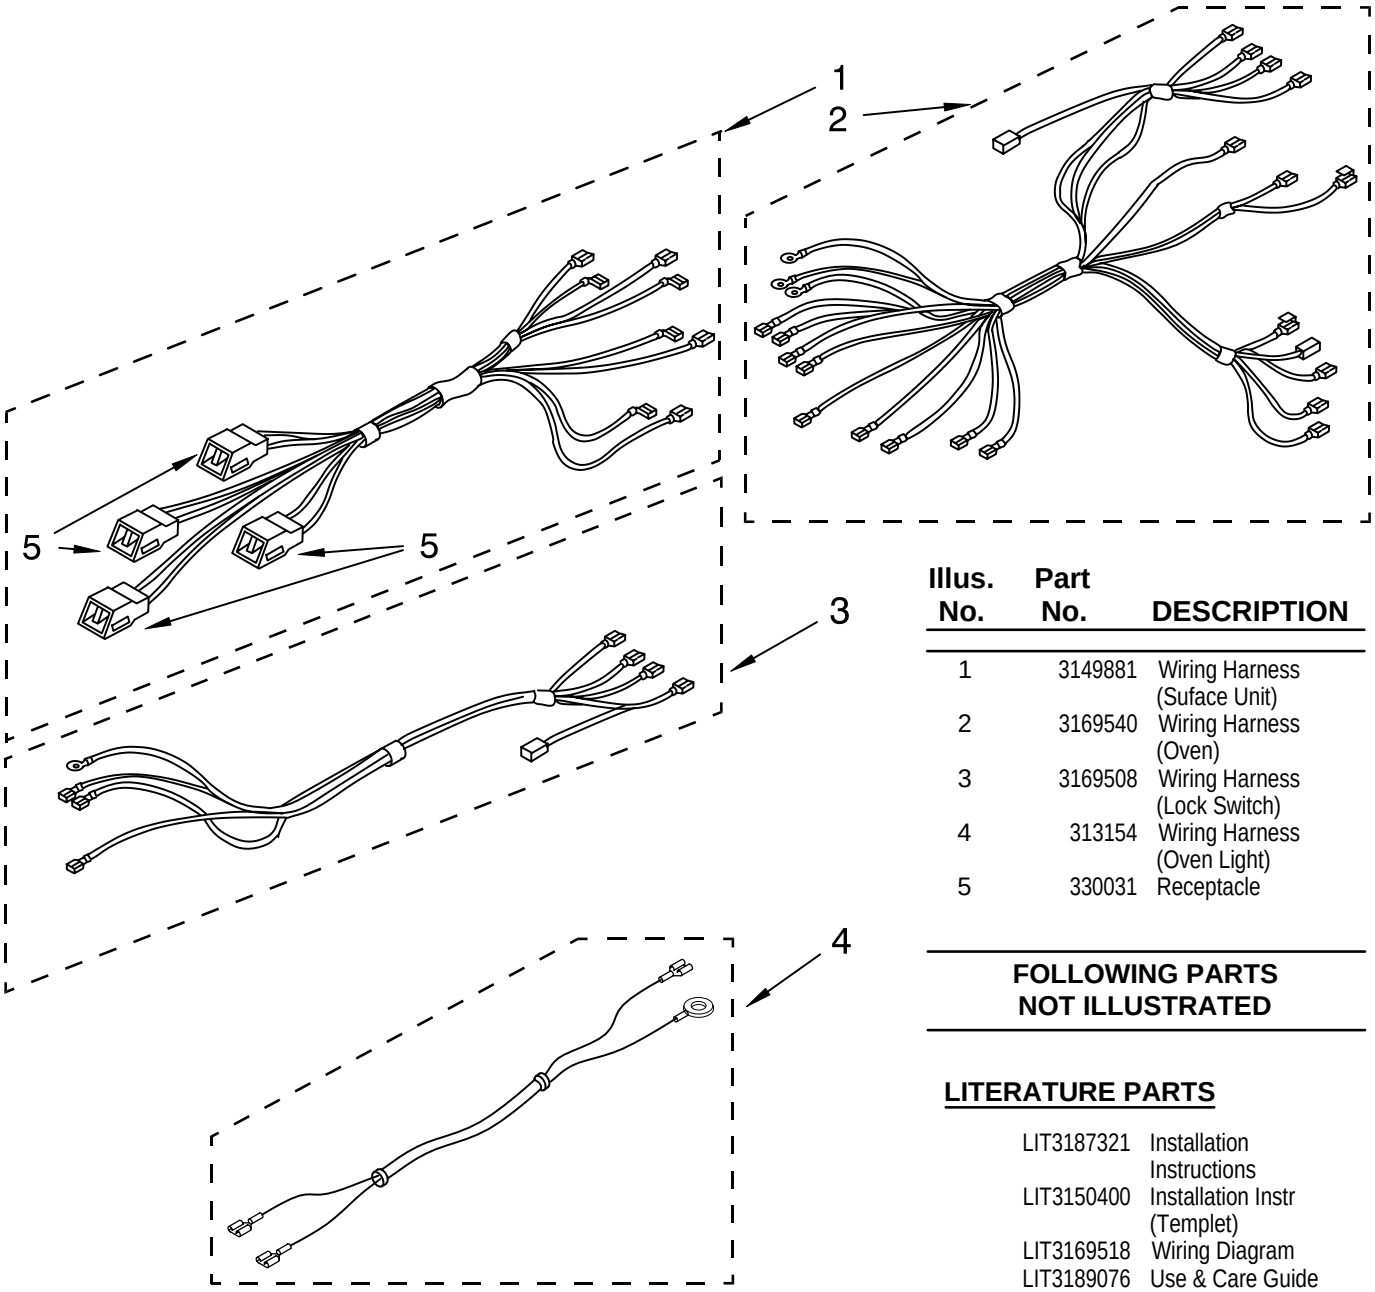

Illus. No.	Part No.	DESCRIPTION
1	3149881	Wiring Harness (Suface Unit)
2	3169540	Wiring Harness (Oven)
3	3169508	Wiring Harness (Lock Switch)
4	313154	Wiring Harness (Oven Light)
5	330031	Receptacle

FOLLOWING PARTS NOT ILLUSTRATED

LITERATURE PARTS

LIT3187321	Installation Instructions
LIT3150400	Installation Instr (Templet)
LIT3169518	Wiring Diagram
LIT3189076	Use & Care Guide

Following May Be Purchased

DO−IT−YOURSELF REPAIR MANUALS

LIT677973	Manual, Range (Do−It−Yourself)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST